

REMOTE CONTROL

REMOTE BUTTONS

- 1 The TIVO BUTTON takes you to the Home screen.
- 2 If programmed, TV PWR turns your TV on or off. Go to the Home screen, choose **Menu** > **Settings** > **Remote, CableCARD, & Devices** > **Remote Control Setup** to program.
- 3 If programmed, use INPUT to select the input for your TV.
- 4 BACK goes back to the previous screen.
- 5 Use the ARROW BUTTONS to navigate the TiVo menus. In live TV, press UP for the one-line guide, DOWN to see personalized predictions, LEFT for your favorite channels, and RIGHT to see what's on other tuners.
- 6 If programmed, VOLUME and MUTE control the volume on your TV or AV receiver.
- 7 Press and hold the VOICE button to issue voice commands.
- 8 REPLAY repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show. When browsing, press to jump to the first item in a strip.
- 9 Use the THUMBS UP and THUMBS DOWN confirm certain commands, as instructed on screen.
- 10 The A, B, C buttons set options and sort and filter views, and to turn accessibility features on or off. Press and hold A for the screen reader, B for closed captioning, or C for audio description.
- 11 CLEAR dismisses items appearing over live TV and deletes titles from My Shows and the To Do List.








- 12 LIVE TV takes you to live TV and lets you cycle through tuners.
- 13 INFO shows the info card while watching a show; press this button again to make it disappear.
- 14 Press OK to choose menu items.
- 15 Use EXIT to go to full-screen video on Home screen and to close certain apps.
- 16 Use CHANNEL UP/DOWN to change the channel or move quickly through lists and the Guide.
- 17 GUIDE takes you to the on-screen Guide.
- 18 Press RECORD to record the show you're watching, or to set up a recording for a show selected in the guide.
- 19 While watching shows, use these buttons to control playback. Press up to three times for three speeds. In TiVo menus, use REWIND and FAST-FORWARD to move quickly through strips. Press PLAY and then OK to start/stop QuickMode.
- 20 ADVANCE moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press to jump to the next tick mark when fast-forwarding or rewinding. Use to enter a dash when tuning to OTA sub-channels.
- 21 The SKIP button initiates the SkipMode function while watching a SkipMode-enabled recording. Look for the on-screen tips.
- 22 Press the NETFLIX button to launch the Netflix app.
- 23 ENTER/LAST returns to the last channel viewed on a tuner.

REMOTE ESSENTIALS


Press the TiVo button  once to go to the Home screen, or twice to go to the My Shows list—your list of recorded shows.


To go back to the previous screen or exit apps, press BACK .


Press the  SKIP or  button to skip commercial breaks and resume playing automatically on SkipMode-enabled shows.

While watching live TV or a recorded show, use your remote to bring up QuickView panels. UP  shows you a condensed guide; DOWN  displays the SmartBar; LEFT  brings up your favorite channels; and RIGHT  shows you what's playing on other tuners.

While watching a recording, press PLAY  to bring up the status bar, and then press  to start QuickMode™ -- that's speeding up a show without missing any dialogue! Press SELECT again to play at normal speed.


CH UP/DOWN  does more than change the channel—it also pages up or down through lists of shows or menu items.

Press ADVANCE  to move forward 30 seconds or to jump to the end of list. Press and hold to catch up to live TV.

Press REPLAY  to jump back 8 seconds or to jump to the beginning of a strip. Press and hold to jump to the beginning of a show.

Turn on accessibility features with the remote: press and hold  to turn on the screen reader. Press and hold  to turn on closed captioning. Press and hold  to turn on audio description.

Add shortcuts to the Home screen by pressing  for options.

To issue voice commands, press and hold the  button. Speak naturally into the microphone (see location in the Remote Control Setup diagram). Release it when you are finished speaking.

REMOTE TROUBLESHOOTING

Press any button on the remote. Does the activity light above the TiVo button on the remote yellow?

If the activity light flashes yellow, the remote is paired with your TiVo box. You can issue voice commands and control your TiVo box even if it is not within line-of-sight.

If the activity light on the remote flashes red, the remote is not fully paired. To pair it manually, choose the Menu icon  on the Home screen, then select *Settings > Remote, CableCARD, & Devices > Remote Control Setup*.

Activity light



ON-SCREEN ICONS

SKIP

SkipMode is available on this recording.



This item is a streaming video.



Recording will be kept until space is needed.



Recording may be deleted to make room for other recordings you have requested, but only if space is needed.



Partial recording (recording was interrupted).



Show is currently being recorded.



TiVo® Suggestion. TiVo Suggestions are recorded only if space is available, and are the first to be deleted when space is needed.



Get more information (e.g., go to Episode screen).



Delete this episode.

NEW

New episode(s) available.



Show will be recorded as an individual recording (not part of a OnePass or WishList search).



Show will be recorded as part of a OnePass search.



Show will be recorded as part of a WishList search.